

"E" SERIES PLANTER BASE HARDWARE LIST:

QUANTITIES:

PHOTO AND DESCRIPTION (SHOWN ACTUAL SIZE):

Models: 00380, 00381, 00480	Models: 00390, 00391, 00490	Models: 00410, 00411	Models: 00430, 00431
--------------------------------------	--------------------------------------	----------------------------	----------------------------




Silver Phillips Pan Head Sheet Metal Screw
#8 X 1/2

1	1	1	1
---	---	---	---



Color Match Phillips Flat Head
Screw #8 X 1/2

4	4	4	4
---	---	---	---

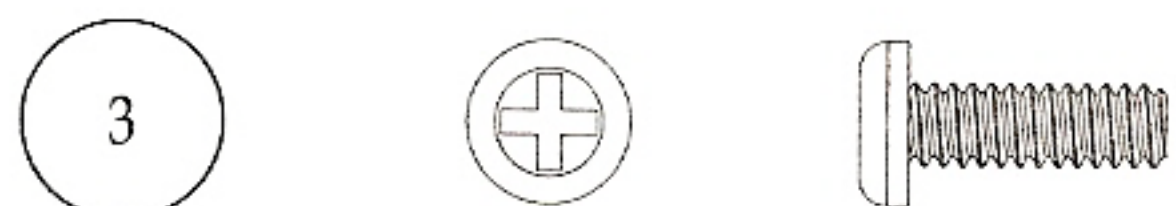

Color Match Pan Head Screw #8 X 1/2


1	1	1	1
---	---	---	---




Cord Retainer

2	2	2	2
---	---	---	---

TOOL REQUIRED:
No. 2 Phillips Screwdriver

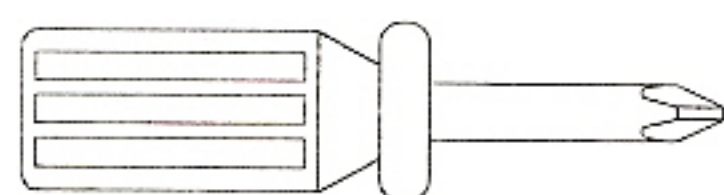

TOOL TIP SHOWN ACTUAL SIZE

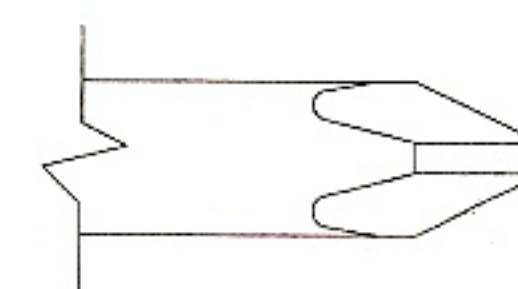

STEP - BY - STEP ASSEMBLY INSTRUCTIONS: "E" SERIES PLANTER BASE LAMP

STEP 1:

Snap Wire **PLANTER RING** (B) into indent ledge around center of **PLANTER BASE** (C) as shown.

STEP 2:

Fasten one of two **TUBE A** (A) into **PLANTER BASE** (C) bottom as shown with **PHILLIPS PAN HEAD SHEET METAL SCREW #8 x 1/2** (1). Make sure to use round hole of 3 hole end of **TUBE A** (A) (not indented hold end) to fasten inside **PLANTER BASE** (C). Only one screw is needed to fasten tube to Planter Base. Take care to align round hole of **TUBE A** (A) and **PLANTER BASE** (C) cord channel with cord retainer holes in it. This will ensure all screw heads and cord exit will be on the back side of the assembled product.

NOTE: PHILLIPS PAN HEAD SHEET METAL SCREW #8 x 1/2 (1) will make its own hole in **PLANTER BASE** (C). Push hard and turn with short Phillips screw driver.

STEP 3:

Fasten **JOINER** (E) to indented hole end of **TUBE A** (A) with **COLOR MATCH PHILLIPS FLAT HEAD SCREW #8 x 1/2** (2).

DO NOT TIGHTEN SCREW SECURELY AT THIS TIME!

STEPS 1-3

